

TO CONFIGURE THE BAUD RATE

1. PLUG UNIT INTO WALL CHARGER
2. PRESS THE BLANK SQUARE AND THE # 1 SQUARE AT THE SAME TIME
3. PRESS THE SCROLL KEY UNTIL YOU SEE BAUD RATE
4. THE NUMBER ON THE RIGHT IS THE CURRENT BAUD SETTING, TO CHANGE IT PRESS THE BLANK SQUARE, THE BAUD RATE WILL CHANGE
5. PRESS THE BLANK SQUARE AGAIN UNTIL THE DESIRED BAUD RATE IS REACHED,
6. TO SAVE THE NEW RATE, PRESS THE LINE FEED AND THE BLANK SQUARE AT THE SAME TIME, THE PRINTER WILL PRINT THE NEW SETTINGS
7. THE BAUD RATE FOR THE PHOENIX IS 9600
8. THE BAUD RATE FOR THE ALCO SENSOR IV IS 9600
9. THE BAUD RATE FOR THE PBA 3000 IS 600